

WARNINGS & SAFETY PRECAUTIONS

- Do not attempt to pierce, strike, or apply strong pressure to your tzumi ColorBox with sharp or heavy objects. Strong impact or shocks could cause irreversible damage to the unit.
- The tzumi ColorBox is not waterproof or water resistant. Do not attempt to operate in the rain or wet environments/conditions.
- The tzumi ColorBox is detachable and contains small parts. Keep out of reach of children.
- If your tzumi ColorBox malfunctions, do not attempt to repair it yourself. Doing so will void the tzumi warranty and may cause physical injury or permanent damage. Instead, contact the Customer Support team at support@tzumi.com or **1-855-GO-TZUMI**.

WIRELESS REMOTE CONTROL

Buttons 1 and 2 can be used to control the brightness for buttons 5, change the speed for buttons 6,7,8,9.



1. Brightness (Up)
2. Brightness (Down)
3. Power OFF
4. Power ON
5. LED Color Buttons -16 colors
6. Flash Transition Effect
7. Strobe Transition Effect
8. Fade Transition Effect
9. Smooth Transition Effect

When remote control operation becomes slow, it is time to change the battery. Replace with a new cell battery
*Compatible with CR2025-CR2032 battery types

ColorBox LED marquee user manual




PACKAGE CONTENTS


- Color-Changing ColorBox LED Marquee
- Infrared Remote Control
- 144 Pc. Letter, Symbol, Number & Emoji Set
- 9.84 ft. USB Power Cable

PRODUCT DIAGRAM

FRONT

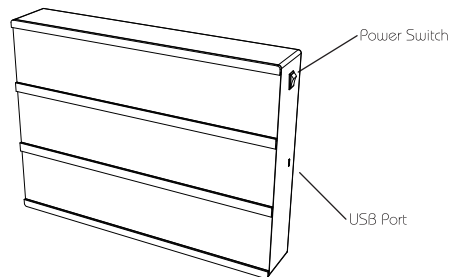

BACK

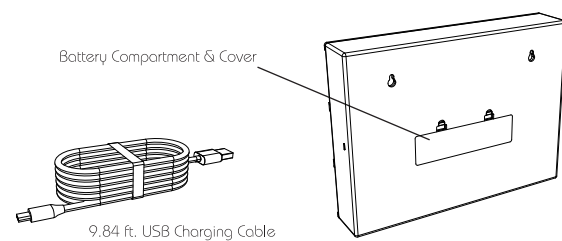

Using Your ColorBox LED Marquee

1. Arrange your own unique message by sliding the included letters/numbers/etc. into each row on the front of the ColorBox.
2. To turn your ColorBox on...
 - a. Using Battery Power: Open the battery cover on the back of your ColorBox. Insert 6 AA batteries as instructed in the battery compartment and close the cover.
 - b. Using USB Power: Connect the ColorBox with the USB cable supplied with the unit. Connect the cable to a USB 5V power source.
3. Remove the battery insulation sheet on your remote control before using.
4. Press the ON button on your remote and the ColorBox will begin to fade through its seven colors. From here you may select an LED color or pattern of your choice to customize your light box display.

PRODUCT SPECIFICATIONS

ColorBox Batteries: 6 AA batteries (Not Included)
Remote Batteries: 1 CR2032 battery (Included)
Input Voltage: DC 5V / 1A
Interface: DC to USB Cable
Working Current: 300 mA
Remote Working Distance: 3.5-11.5 ft. (1-3.5 meters)

life just got better.
tzumi[®]

tzumiLED™. Distributed by tzumi inc. NY, NY, 10016.
©Copyright 2021 tzumi. All Rights Reserved. Made In China. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Other trademarks and trade names on this package are those of their respective owners.

