

Table of Contents

1.	Introduction and Features
2.	What's in the Box
2.1	Get Familiar with Your Spree
3.	Setup and Use
3.1	Cleaning the Vacuum
3.2	Maintenance
4.	Precautions
E	Cassifications





2 What's in the Box

Your new Spree vacuum is quick and easy to assemble. Let's start with all the parts you will be taking out of the box:

Spree Vacuum Handheld Base

Compact, with easy on/off controls

Extender Handle & Tube

Attach for upright vacuuming

Floor Brush Extension

Low profile and effective multi-surface cleaning

Slim Nozzle

Ideal for tight corners and hard-to-reach places

HEPA Filter

Removable and easy to clean

User Guide





Setup and Use

Using the Floor Extension

- Insert the extension tube into the extension handle, making sure to align it so they lock into place. Then, insert it into the top of the vacuum cleaner, making sure to align it so the handle clicks into place.
- Attach the motorized floor brush to the vacuum by inserting it into the bottom of the dustbin. Firmly press it into place; you will know it has securely attached when you hear a "click".
- To remove the Floor Extension, press and hold the floor extension release latch and pull the extension out from the vacuum.
 - Use the motorized floor brush to vacuum hard floors and carpet.
 - · Do not use it on shag carpet,



Using the Slim Nozzle

- Attach the Slim Nozzle to the vacuum by inserting it into the bottom
 of the dustbin.
- 2. To remove the Slim Nozzle, gently $\operatorname{\text{\rm pull}}$ it out from the bottom of the dustbin.
- $^{\circ}$ Use the Slim Nozzle to clean corners, edges of drawers, crevices, and hard-to-reach places.

Using the Spree Vacuum

- 1. Plug the power cord into a wall outlet.
- 2. Press the Power Switch to turn the vacuum on and begin cleaning.
- 3. Push the release button located above the Power Switch to remove the handle and use the vacuum as a handheld.

3.1 Cleaning the Vacuum

Emptying the Dustbin

- Turn the vacuum off and press the dustbin release latch. Gently pull the dustbin from the vacuum.
- 2. Remove the filter from the dustbin.
- 3. Empty the dustbin into a trash bin. Gently tap the side of the dustbin to remove any leftover build-up.
- Replace the filter and reattach the dustbin by securely attaching it to the vacuum base,

NOTE: The dustbin may be rinsed with warm water and a mild detergent if necessary. Be sure to dry it thoroughly before reattaching it to the vacuum.

Cleaning the Filter

- Once the filter is removed from the dustbin, shake it over a trash bin and gently tap it until all debris is gone.
- 2. The filter can be rinsed with water if necessary. Make sure it has fully dried before reattaching,
- Return the filter to the dustbin and follow the instructions above to securely reattach the dustbin to the vacuum.

3.1 Cleaning the Vacuum

Cleaning the Roller Brush

Turn the vacuum OFF and unplug it from the electrical outlet. Press the release button to remove the Floor Extension from the vacuum.



Use a coin or a screwdriver to turn the brush cover dial to the unlock position. Pull up on the tab and remove the cover, Pull the brush out from the Floor Extension, clean it, and remove any entangled hair.



 To reinsert the brush, align the end of the brush with the rotating piece shown in the diagram.
 Be sure the brush is fully inserted and push down to reinstall it.



 Insert the end of the brush cover into the slot in the Floor Extension to replace the cover. Firmly click the cover back into place and turn the dial back to the locked position.







4. Precautions

- To reduce the risk of electrical shock, turn the power switch OFF, and disconnect the polarized plug from the electrical outlet before performing any maintenance or troubleshooting checks,
- 2. Do not immerse this vacuum in water or any other liquid.
- 3. Do not touch the vacuum with wet hands.
- Do not expose the vacuum to outdoor weather conditions, heat sources, direct sunlight, humidity, or sharp edges.
- Do not pull or carry the vacuum by the power cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners.
- Do not use if the power cord is defective or damaged, if the product has been dropped, or if it shows signs of damage or malfunction.
- 7. Do not use extension cords.
- Do not leave the vacuum unattended when it is plugged into the power supply.
- 9. Disconnect the unit from the wall outlet when it is not in use.
- 10. Keep the vacuum away from children.
- The vacuum should not be used by children or persons with reduced physical, sensory, or mental capabilities.
- 12. Keep hair, clothing, and body parts away from the suction opening during use.
- Do not attempt to alter, fix, or disassemble this unit. If this unit is damaged or malfunctioning, please contact customer service or a qualified electrician.
- Do not operate the vacuum if the filter is wet or damp, or if it isn't properly in place.
- 15. Only use the recommended attachments with this product.
- 16. Do not pick up flammable or toxic objects with the vacuum, such as ammonia, chlorine bleach, lighter fluid, gasoline, kerosene, etc.
- Do not pick up hard or sharp objects with the vacuum, such as glass, nails, screws, etc.

5. Specifications

Input	120V/50-60Hz
Power	350W
Suction power	10kPa
Dustbin capacity	1.2L
Cord length	20ft.
Sound level	<78dB
Size	43 x 6.5 x 10in.
Weight	4.35 lb. (1.97 kg)

ionvac Spree, Item No. 8899, Distributed by tzumi Inc., NY, NY, 10016, ©Copyright 2023 tzumi Inc. All Rights Reserved, Made in China. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.



For more details on the ionvac family of products or to check out more brilliant innovations, visit: www.tzumi.com.

