

barista series

purée



ICED TEA MAKER



USER GUIDE



Congratulations on your new Purée Iced Tea Maker! Now you can enjoy freshly brewed iced tea or coffee whenever you want. Simply fill the large-capacity Water Reservoir with water, the Pitcher with ice, and the removable Steeping Basket with loose/bagged tea or freshly ground coffee, press the power button, and let the Iced Tea Maker brew up to 8 cups of your favorite cold beverage. Enjoy your beverage as is, or enhance its flavor by adding sugar, honey, lemon, milk, or herbs to the included 2-quart Pitcher. With the Purée Iced Tea Maker, you'll always have a fresh batch of your favorite brewed beverage ready for your enjoyment.

Diagram



Features

- Can brew fresh iced tea, coffee, and more in just a few minutes.
- Removable Steeping Basket, for extra brewing convenience.
- Large, sturdy 2-quart Pitcher with handle.
- Simple one-button operation.
- Automatic shut-off feature, for added safety.
- Brews up to 8 cups of fresh iced coffee or tea at a time.

1. Fill with water.



2. Add ice to the Pitcher.



3. Add coffee or tea.



4. Power ON to brew.



How to use

- Place the unit on a dry, level surface, away from edges and heat sources.
- Fill the Pitcher with cold water to the water line, then pour the water into the Water Reservoir.
- Fill the Pitcher with ice cubes up to the ice level mark.
- Place the Steeping Basket on the Pitcher, then insert an 8-12 cup-sized paper filter inside of the Steeping Basket.
- Pour your desired amount of coffee grounds, loose-leaf tea, or tea bags into the filter (see the chart on the next page).
- Place the Steeping Basket Lid on top of the Steeping Basket, then slide the Pitcher under the Iced Tea Maker, making sure the spout on the Iced Tea Maker aligns with the hot water intake on the Steeping Basket Lid.
- Plug the power cord into a nearby outlet, then press the Power button to start the brewing cycle. The Power button will glow during the brewing cycle.
- The unit will run a brewing cycle until all the water in the Water Reservoir is used. Once the brewing cycle is complete, the unit will automatically shut off.
- Remove the Pitcher from the machine. Let the beverage and the unit cool down for a few minutes.
- Remove the Steeping Basket from the Pitcher. Discard the used coffee grounds, tea leaves, or tea bags. Thoroughly clean the Steeping Basket afterward.
- Place the Pitcher Lid on the Pitcher to begin serving.
- The Power button starts the brewing process, but it does not function as an Off button. To stop the brewing process midway, unplug the unit from the power outlet.

How to use

- Wait a couple of minutes for the water to finish seeping into the Pitcher before removing the Steeping Basket.

Recommended Measurement Chart

Volume	Tea	Coffee
1 Quart	3-5 regular tea bags or 1-3 tbsp. of loose tea	6-8 tbsp. of ground coffee
2 Quarts	6-10 regular tea bags or 2-4 tbsp. of loose tea	10-14 tbsp. of ground coffee

NOTES:

- Before using the Iced Tea Maker, it is recommended that you run a brewing cycle once with water only.
- The measurements provided in the chart above are suggestions. You may alter them to suit your personal preferences.
- Unplugging the unit will not stop the brewing process immediately.

CUSTOMER SUPPORT

If you have questions about using the Purée Iced Tea Maker, we are here to help. Call or email us, and an experienced customer support representative will be happy to assist you: support@tzumi.com or **1-855-GO-TZUMI**.

Troubleshooting

Problem:

Pressing the Power button doesn't immediately start the brewing cycle.

Solutions:

- Check that the unit is plugged in.
- Make sure that the Water Reservoir has water in it.
- If the Iced Tea Maker was recently used, unplug it from the outlet and let the machine cool down for 15 minutes. Plug the unit back in and enjoy!

Problem:

The Iced Tea Maker is brewing slowly, or the brewed beverage tastes differently.

Solutions:

- Check that the Water Reservoir has enough water in it.
- Clean and descale the Iced Tea Maker to remove any buildups of mineral deposits that may be clogging the machine and/or altering the taste of the brew.



Cleaning & Maintenance

Daily Cleaning Routine

The Iced Tea Maker should be cleaned after every use.

1. Before cleaning the unit, make sure it is turned off, unplugged from the power source, and completely cooled down.
2. Remove the Steeping Basket and the Steeping Basket Lid, then wash them with warm, soapy water, Dry these parts thoroughly,
3. Wash the Pitcher and the Pitcher Lid thoroughly with warm, soapy water, then set them out to dry.
4. Wipe the exterior of the Water Reservoir with a slightly damp and non-abrasive sponge, cloth, or towel. Dry it with a clean, non-abrasive towel.

Descaling Cleaning Routine

Minerals in the water will leave deposits inside of the Iced Tea Maker after every use. To safeguard the unit's performance, it is recommended that you clean these deposits periodically.

1. Mix store-bought descaler with water, following the descaler's instructions, then fill the Pitcher to the water line with the solution.
2. Pour the solution into the Water Reservoir.
3. Cover the Steeping Basket with the Lid, then place the Steeping Basket on top of the Pitcher. Align the Iced Tea Maker's spout with the hot water intake on the Steeping Basket Lid.
4. Press the Power button to start a brewing cycle.
5. Once the brewing cycle is finished, allow the solution to sit and cool for 15 minutes before discarding it.
6. Repeat steps 1-5 one more time.
7. Rinse the unit by running a brewing cycle with water only. Repeat this process at least 2 times to fully flush out the descaler solution from the unit.

Cleaning & Maintenance

Descaling Cleaning Frequency

The frequency with which you should descale the unit depends on the hardness of the water used, as well as how often you brew:

- Soft water: approximately every 80 brewing cycles.
- Hard water: approximately every 40 brewing cycles.



Important Safeguards

Note: After the Iced Tea Maker shuts off, there may be some steam coming off of the leftover water in the Water Reservoir.

- Do not touch the unit while it is hot or while it is running.
- Unplug this unit from the power outlet when it is not in use.
- Always allow the unit to cool down completely before cleaning it.
- Do not operate this unit with a damaged cord or plug.
- Do not operate this unit if it is damaged or malfunctioning.
- Do not attempt to disassemble, modify, or repair this unit. In case of any damage or malfunction, take it to a qualified technician.
- Do not use this unit with any accessories other than those provided by the manufacturer.
- Do not use this unit for anything other than its intended purpose.
- Do not place this unit on or near heat sources, such as electric, gas, or induction stoves.
- Do not use this unit outdoors. This unit is for indoor use only.
- To prevent electric shocks, do not immerse the unit or its power cord in water or any other liquid.
- Never leave the unit unattended while it is in use and/or plugged into a power outlet.
- Do not refill the Water Reservoir while the unit is On. Allow it to cool down before filling it with water.
- Only add cold water or ice to the Pitcher before brewing.
- Do not use this appliance if the pitcher is cracked or damaged in any way.

Important Safeguards

- Exercise caution when using this unit near children and/or physically or cognitively challenged persons.
- Keep this unit out of the reach of children. This product is not a toy.
- Do not use this unit with an extension cord.
- This appliance features a polarized plug that is intended to fit in a polarized outlet in only one way. Do not attempt to modify the plug.





SPECIFICATIONS

Input: AC 120V/60Hz

Power: 700W

Weight: 4.4 lbs.

Purée Iced Tea Maker. Distributed by tzumi Inc. NY, NY, 10016. ©Copyright 2024 tzumi Inc. All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.



purée

