

COZi

Heated Blanket

User Guide



Introduction

Congratulations on your new Cozi Heated Throw Blanket. Made of ultra-soft flannel and plush sherpa, this large yet lightweight throw blanket is designed to wrap you up in an irresistibly toasty cocoon. Featuring 9 timer settings and 6 adjustable heat levels ranging from 86°F to 108°F, it is perfect for keeping you warm during the cold winter months. Discover the ultimate coziness within its folds – equipped with an easy-to-use inline controller, this heated throw blanket can provide you with all the warmth and comfort you desire with the press of a button.

Features

- 9 timer settings & 6 heat levels, from 86°F to 108°F.
- Made with ultra-soft flannel & sherpa.
- Easy-to-use wired controller with an LED display.
- Fast & even heating, for total comfort.

What’s in the Box

- 1x Heated Blanket
- 1x Wired Controller
- User Guide

Know Your Heated Blanket

1. Heated Blanket

2. AC Plug

3. Power Cord

4. Inline Controller

5. Connector
-



Know Your Controller

1. Heat Indicator

2. Timer Indicator

3. Heat Button

4. Power Button

5. Timer Button

Using The Heated Blanket

Setting Up

1. Plug the controller into the heated blanket’s connector.

2. Insert the AC plug into a nearby AC outlet.

Heating the Blanket

1. Press and hold the power button to turn the heated blanket ON. The controller’s LED display will light up, and the blanket will automatically enter the highest heat level (Level 6) and activate the default timer option (3 hours).

2. Press the Heat button to cycle through the 6 heat levels available:

a. First press: Level 1 - 30°C/ 86°F

b. Second press: Level 2 - 32°C/ 89.6°F

c. Third press: Level 3 - 35°C/ 95°F

d. Fourth press: Level 4 - 37°C/ 98.6°F

e. Fifth press: Level 5 - 40°C/ 104°F

f. Sixth press: Level 6 - 42°C/ 108°F

3. Press the Timer button to cycle through 9 timer options:

a. First press: 1 hour

b. Second press: 2 hours

c. Third press: 3 hours

d. Fourth press: 4 hours

e. Fifth press: 5 hours

f. Sixth press: 6 hours

g. Seventh press: 7 hours

h. Eighth press: 8 hours

i. Ninth press: 9 hours

4. You can press the Heat and/or Timer buttons at any time to adjust the heat and/or timer settings to your preference.

5. Press and hold the power button at any time to turn the heated blanket OFF.

Important Safety Notes

Automatic Timer & Standby Mode

- The heated blanket has 9 timer settings. Once the selected timer runs out, the timer indicator on the controller’s LED display will flash green and the blanket will enter standby mode.
- Press and hold the power button to turn the unit OFF, or press the Heat and/or Timer buttons again to restart it.
- Once it is restarted, the unit will enter default mode (Heat Level 6, 3-Hour Timer).

Customer Support

If you have any questions about using this product, we are here to help! Call or email us, and an experienced customer support representative will be happy to assist you: **1-855-GO-TZUMI** or **support@tzumi.com**.

Product Specifications

- Material: Flannel + Sherpa
- Input: 120V
- Power: 100W
- Product Size: 50" x 60"
- Product Weight: 3 lbs.



Cozi Heated Blanket, Item. No. 30041. Made in China. All Rights Reserved. ©Copyright 2025. All other trademarks and trade names are those of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product enhancement. Subject to change without prior notice.



Cleaning & Maintenance

- To clean the wired controller, use a dry, lint-free cloth. Do not use any harsh or abrasive cleaning agents.
- Use a damp cloth or sponge to remove small stains and spots from the heated blanket. If necessary, use a small amount of liquid detergent formulated for delicate fabrics.
- This heated blanket is machine washable:

- Set the washing machine to the gentlest wash cycle at 86°F (30°C) maximum.

- Use a delicate laundry detergent.
- Reshape the blanket to its original size immediately after washing, while it is still wet, then spread it out flat over a drying rack to dry.

Important Notes:

- This heated blanket cannot be chemically cleaned (e.g. via dry cleaning), bleached, wrung out, tumble dried, or ironed.
- DO NOT use clothes pegs or similar items to secure the blanket to the drying rack. Doing so may damage the blanket.
- DO NOT attempt to dry this heated blanket by turning it on. This poses a serious risk of electric shock.
- DO NOT connect the wired controller to the blanket until it is completely dry. Doing so may damage the blanket.
- If you do not plan to use the blanket for a long period of time, disconnect it from the wired remote. It is recommended that you store the blanket in the original package.
- Always let the blanket cool down completely before folding it.
- DO NOT crease the blanket or place heavy objects on top of it during storage.

Warnings & Safety Information

Read the following warnings and safety instructions carefully before using the heated throw blanket. Keep this user guide for future reference.

- Do not use this blanket folded or rucked.
- Do not iron, dry-clean, bleach, or tumble dry.
- Do not use this blanket if it is wet.
- Do not use this blanket on infants, immobile persons, persons who are not sensitive to heat (e.g. diabetics, persons with poor circulation, or persons with extensive scarred tissue or skin alterations due to illness), or on persons who may not be able to react to overheating (e.g. persons with impaired physical, sensory or mental capabilities).
- Do not use this blanket after consuming alcohol or taking pain relief medication.
- Do not use this blanket on children under the age of 3.
- Keep this blanket out of the reach of children. This unit is not a toy.
- This blanket is intended for domestic use only.
- Do not use this blanket for anything other than its intended purpose.
- This blanket may only be used in conjunction with the controller provided by the manufacturer. Do not use any unauthorized accessories with this unit.
- Do not pull, twist or bend the cables.
- Check the blanket for signs of wear and tear and any other kind of damage before each use.
- Do not use this unit if it is damaged, malfunctioning, or if it has visibly exposed parts.

Warnings & Safety Information Cont.

- Do not tear open, modify, or disassemble this unit in any way.
- If the wired controller becomes damaged, it must be disposed of. If it cannot be removed from the blanket, then the entire unit must be disposed of.
- Do not expose the blanket or the wired controller to heat sources, such as fire, radiators or direct sunlight.

Polarization Insertion Information

This device features a polarized plug (one prong is wider than the other) to reduce the risk of electric shock. This plug will fit in a polarized socket in only one way. If the plug does not fit all the way into an outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Product Disposal

For environmental reasons, do not dispose of this unit with household waste. Once the unit reaches the end of its useful life, dispose of it at a suitable local collection site or recycling facility. Contact your local and state authorities for proper disposal procedures.