



Model: ATF5

Features:

- 3-Speed Settings
- Includes 7.5-hour Auto-off Timer Function
- Oscillation Function
- Multi-function Remote Control
- Built-in Handle For Easy Portability
- Space-Saving Tower Fan Design

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicates the level of hazard; "WARNING" indicates a hazard which, if not avoided, could result in injury or death.

INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS

⚠ WARNING: Shock Hazard
Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.
⚠ WARNING: Hot Surfaces
Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.
⚠ WARNING: Fire Hazard
Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.
⚠ WARNING: Electrical Shock Hazard
Do not use with damaged cord or plug. Use with adequate electrical system that is up to code.
⚠ CAUTION: To Prevent Electric Shock
This product has a polarized two prong plug (one blade is wider than the other) that must be fully inserted in to a matching properly grounded outlet. This plug is designed to fit a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
⚠ WARNING: To Reduce the Risk of Fire or Electric Shock
DO NOT use this product with any solid- state speed control device.
DO NOT operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact Tzumi® Innovations Customer Service by telephone or mail for information and assistance.
DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

USAGE:

Fan Operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

Fan Location: Place the fan in the area of the room that will provide proper fan cooling.

Fan Connection: Turn on the 120V-60Hz power supply, the power indicator will light up.

Turning Fan ON/OFF: Press this button to turn on the fan when the power is off, press it again to turn off the fan. In the power on state, press **Wind Speed Key** to adjust the wind speed, there are three gears to choose in cycle. Press **Wind Mode Key** to set the fan operation mode, there are three air types to choose from: normal air - natural air - sleep air mode, this key also can cycle through the choices. Press **Timer Key** to set the timer when the fan is on, there are 7.5 hours timer options. Each press of this button adds 0.5 hours, 0.5H-1H-1.5H-2H-2.5H-3H-3.5H-4H-4.5-5H-5.5H-6H-6.5H-7H-7.5H-Off.

Oscillation: In the on state, press **Oscillation Key** to turn on the oscillating wind function, then press this key to turn off. Oscillation angle: 70°

***Note:** 1. The normal wind and swing head functions of this machine come with memory, but timing and power failure are not remembered. 2. The mute function on the remote control means that when the mute function is switched on, there will be no buzzer "beep" sound when other function keys are pressed.*

***Note:** Some models come with a plug where you can replace a fuse. If your model has this, please read and follow the below instructions to replace the fuse.*

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Fuse Replacement:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades – See **Image B**.
3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window – See **Image C**.
4. Replace fuse. **WARNING:** Risk of fire. Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6mm x 10mm). Be sure fuse is properly seated within its cavity.
5. Close fuse cover by sliding it back to its original closed position.



Image A



Slide Cover to Open


Image B



Image C

THE PARTS



1. Transparent cover
2. Push button
3. Remote control
4. Top cover
5. Back case
6. Front case
7. Power cord
8. Base
9. Foot pads

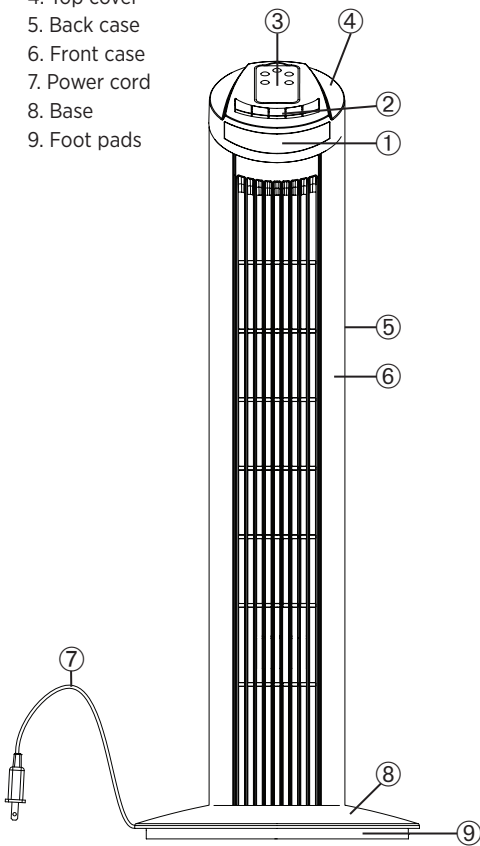


Product Specifications and Parameters

- Rated voltage:120V ~ 60Hz
- Rated power: 40W
- Net weight: approx. 2.7kg
- Product size: 270mm x 270mm x 750mm

FAN ASSEMBLY:

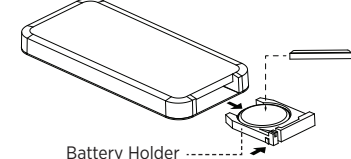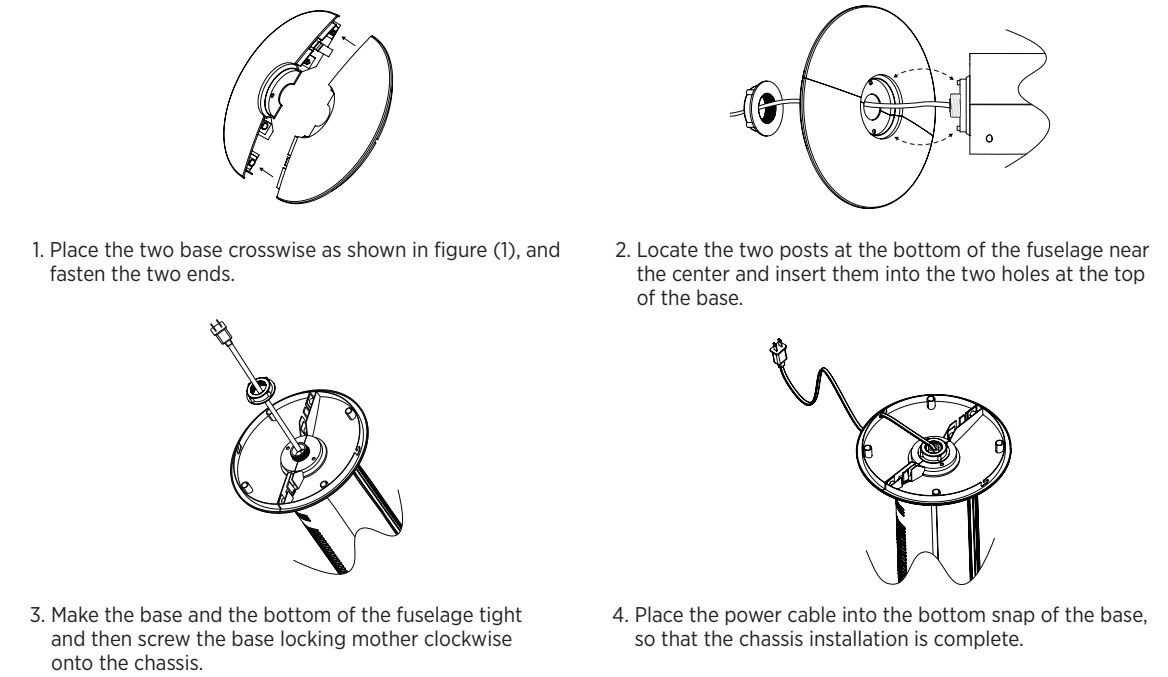

Battery Holder

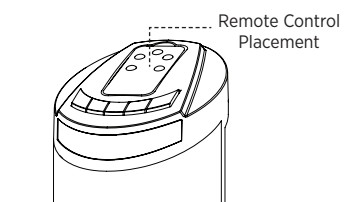

Remote Control Placement

Remote Control Battery Replacement

Press the locking tab A with your thumb, then pick the end of the battery holder with your index finger and pull out the holder towards the arrow B to remove the battery. When installing the battery, be sure to pay attention to the direction of the "+"and "-" poles of the battery (as shown above), do not install the battery backwards.

Note: The battery type is: CR2025 3V lithium battery, do not install a different specification type of battery.

Remote Control Storage

Please return the remote control to the top cover remote control storage compartment when finished using it.

CARE AND MAINTENANCE

Cleaning: **CAUTION-**Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. **DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER.** Replace front grille before fan use. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance: The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair: **DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.**

Storage: After cleaning, make sure to wait until it is sufficiently dry before using it with electricity. If you need to store it, please put the parts into the box in the original packing order and place it in a dry place for proper storage.

LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to Tzumi® Innovations for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Tzumi® Innovations are not covered in this warranty. Tzumi® Innovations will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

tzumi® Innovations
New York, NY 10016, USA
www.airtekcomfort.com

Customer Support:
1-855-GO-**tzumi**® (1-855-468-9864)
support@tzumi.com



Modelo: ATF5

Funciones:

- Ajustes de 3 Velocidades
- Incluye Función de Temporizador de Apagado Automático de 7.5 Horas
- Funcion de Oscilacion
- Control Remoto Multifunción
- Asa Incorporada Para Una Fácil Portabilidad
- Diseño de Ventilador de Torre Que Ahorra Espacio

USO PREVISTO:

Este producto está diseñado para usarse únicamente en espacios residenciales interiores y en oficinas, no está diseñado para aplicaciones industriales ni otras aplicaciones comerciales. Utilice la unidad únicamente con cableado que esté en buenas condiciones de funcionamiento y que cumpla las ordenanzas y los códigos aplicables. Si tiene alguna pregunta acerca de si su cableado es adecuado, consulte a un electricista calificado.

Mientras use su ventilador, debe seguir las INSTRUCCIONES enumeradas a continuación. Como parte de esas instrucciones, hemos utilizado la palabra "ADVERTENCIA" para indicar el nivel de peligro: ADVERTENCIA indica un peligro que, si no se evita, podría causar lesiones o la muerte.

INSTRUCCIONES

Al igual que con todos los electrodomésticos, se deben tomar siempre precauciones básicas de seguridad para reducir el riesgo de descarga eléctrica, incendio o lesiones personales, incluidas las siguientes precauciones:

- Lea todas las instrucciones antes de utilizar este ventilador.
- Use este ventilador solo como se describe en este manual. Cualquier otro uso no recomendado por el fabricante podría producir descarga eléctrica, incendio o lesiones personales.
- No encienda este ventilador con un cable de alimentación dañado o después de que el ventilador haya presentado un mal funcionamiento o se haya caído de alguna manera.
- Se necesita tener máxima precaución cuando mascotas, niños o personas inválidas utilizan o están cerca de un ventilador, y siempre que el ventilador quede funcionando sin vigilancia.
- No coloque el ventilador en un lugar pequeño, desnivelado, irregular o en cualquier superficie que pueda causar que el ventilador se incline o se caiga.
- Para el funcionamiento adecuado, el ventilador debe colocarse en una superficie regular, no combustible.
- Siempre desenchufe el ventilador cuando no este en uso, cuando lo ponga en otro lugar, cuando se arma o desarma, y antes de limpiarlo.
- El uso de accesorios no recomendados o vendidos por el fabricante podría causar peligro.
- No usarlo afuera.
- No use el ventilador en ventanas. La lluvia podría causar un peligro eléctrico. (Para modelos no para ventanas).
- Desenchufe siempre el ventilador cuando no esté en uso.
- No encienda el ventilador con protectores de aspas o sin haber quitado cualquier dispositivo de seguridad.
- Evite el uso de cables de prolongación por el riesgo de incendio. Si se debe utilizar un cable de prolongación, el cable debe ser como mínimo de 14 AWG y de no menos que 1875 vatios.
- No pase el cable de alimentación debajo de las alfombras. No cubra el cable con tapetes, alfombras de pasillo o cubiertas similares. Disponga el cable lejos de la zona de tránsito, donde no pueda provocar tropiezos.
- No inserte ni permita que algún objeto ingrese en las aberturas del ventilador. Esto podría provocar una descarga eléctrica y/o peligro de incendio. Evite contacto con partes en movimiento.
- Este aparato no es para uso de personas (incluyendo niños) con discapacitaciones reducidas físicas, de capacidad mental o de sentidos o falta de experiencia y conocimiento, a menos de que hayan recibido supervisión o instrucción sobre el uso del aparato por una persona responsable de su seguridad.
- Los niños deben ser supervisados para estar seguro de que no jueguen con el aparato.

LEER Y GUARDAR ESTAS INSTRUCCIONES

⚠ ADVERTENCIA: Peligro de descarga
Utilice su ventilador solo en entornos secos. Este ventilador no está diseñado para utilizarse en baños, áreas de lavandería o lugares similares ni cerca de lavaplatos, lavarropas, piscinas u otras fuentes de agua. Nunca coloque el ventilador donde pueda caerse en una bañera o en otro recipiente de agua. No lo use en entornos húmedos, tales como sótanos inundados.
⚠ ADVERTENCIA: Superficies calientes
No toque el motor del ventilador cuando esté en uso. Este motor está caliente cuando está en uso, para evitar quemaduras, no deje que la piel descubierta toque las superficies calientes.
⚠ ADVERTENCIA: Peligro de incendio
Los ventiladores tienen piezas internas que producen arcos eléctricos o chispas. No lo utilice cerca de materiales combustibles o fases inflamables ni fuentes de calor. NO LO USE en áreas donde se utilicen o se almacenen gasolina, pintura o materiales inflamables. Para evitar posibles incendios, no bloquee las tomas ni el escape de aire de ninguna manera. No inserte ni permita que ingresen objetos extraños en ninguna apertura de ventilación o de escape, ya que esto podría causar una descarga eléctrica o un incendio, o dañar el ventilador.
⚠ ADVERTENCIA: Peligro de descarga eléctrica
No use con cordón o enchufe dañado. Use con sistema eléctrico adecuado y de acuerdo a los códigos.
⚠ PRECAUCION: para evitar choque electrico
Este producto tiene un enchufe polarizado con dos patas (una más ancha que la otra) y que deben insertarse por completo en un toma corriente equivalente debidamente a tierra. Este enchufe está diseñado para entrar en un toma corriente polarizado de una manera solamente. Si el enchufe no entra por completo en el toma corriente delo vuelta. Si el enchufe todavía no entrara, contacte a un electricista profesional. No intente forzar esta característica de seguridad.
⚠ ADVERTENCIA: para reducir el riesgo de incendio o choque eléctrico
NO use este producto con cualquier aparato de estado sólido de control de velocidad.
NO encienda ningún ventilador con un cable o enchufe dañado o después de que el ventilador haya presentado un mal funcionamiento, se haya caído o dañado de alguna manera. No encienda el ventilador con un aspa, armazón de seguridad roto o cualquier imperfección de servicio de reparo. Para las reparaciones cubiertas bajo la visual. Desconecte la electricidad antes garantía, consulte la declaración de garantía. Para todas las demás reparaciones póngase en contacto con el Servicio al cliente de Tzumi® Innovations por teléfono o correo para obtener información y asistencia.
NO pase el cable de alimentación debajo de las alfombras. NO cubra el cable con tapetes, alfombras de pasillo o cubiertas similares. Disponga el cable lejos de la zona de tránsito, donde no pueda provocar tropiezos. Evite el uso de cables de prolongación por el cable debe ser como mínimo de 14 AWG y de no menos que 1875 vatios. No use un cable de prolongación a menos que se pueda insertar totalmente el enchufe en su receptáculo. Desenchufe el ventilador cuando no esté en uso. No encienda el ventilador con su ventilación obstruida.

USO:

Operación del ventilador: Siempre opere el ventilador en posición vertical siguiendo todas las instrucciones y recomendaciones listadas en este manual.

Ubicación del ventilador: Recomendaciones listadas en este manual. Ubicación del ventilador: XPonga el ventilador en un área de la habitación que provee ventilación fresca adecuada.

Conexión del ventilador: Enchufe el ventilador directamente en un tomacorriente de pared de 120 voltios C.A., 60 Hz. Asegúrese que el enchufe entra bien ajustado en el tomacorriente. Una conexión floja podría causar sobrecalentamiento y daño al enchufe o al ventilador.

Nota: Para evitar sobrecarga al circuito no enchufe el ventilador en un circuito que ya esté siendo usado para otras cosas.

Encendido / apagado del ventilador: Presione este botón para encender el ventilador cuando el ventilador esté apagado, presiónelo nuevamente para apagar el ventilador. En el estado de encendido, presione la tecla de velocidad del viento para ajustar la velocidad del viento, hay tres marchas para elegir en el ciclo. Presione la tecla de modo de viento para configurar el modo de operación del ventilador, hay tres tipos de aire para elegir: aire normal - aire natural - modo de aire de reposo, esta tecla también puede recorrer las opciones. Presione la tecla del temporizador para configurar el temporizador cuando el ventilador está encendido, hay opciones de temporizador de 7,5 horas. Cada pulsación de este botón añade 0,5 horas, 0,5h-1h-1,5h-2h-2,5h-3h-3,5h-4h-4,5-5h-5,5h-6h-6,5h-7h-7,5h-Off.

Oscilación: In the on state, press **Oscillation Key** to turn on the oscillating wind function, then press this key to turn off. Oscillation angle: 70°

Nota: 1. Las funciones normales de viento y cabeza oscilante de esta máquina vienen con memoria, pero no se recuerdan los tiempos y los fallos de energía. 2. La función de silencio en el control remoto significa que cuando la función de silencio está encendida, no habrá sonidos de pitido cuando se presionan otras teclas.

Nota: Algunos modelos incluyen una clavija para reemplazar un fusible. Si su modelo tiene esto, lea y siga las siguientes instrucciones para reemplazar el fusible.

Este producto emplea una protección contra sobrecarga (fusible).Un fusible quemado indica una sobrecarga o un cortocircuito. Si se quema el fusible, desenchufe el producto desde otro tomacorriente. Reemplace el fusible según las instrucciones de mantenimiento para el usuario (siga el marcado del producto para obtener la corriente adecuada del fusible) y verifique el producto. Si el reemplazo del fusible se quema, puede ocurrir un cortocircuito y se debe desechar o devolver el producto a una instalación de servicio autorizado para su examen y/o reparación.

Reemplazo del fusible:

1. Sujete el enchufe y quitelo del receptáculo u otro dispositivo de tomacorriente. No desenchufe tirando del cable.
2. Abra la cubierta del fusible al deslizar la cubierta de acceso en la parte superior del enchufe hacia las aspas. Consulte la **Imagen B**.
3. Quite el fusible cuidadosamente. Utilice una pequeña herramienta para levantar el extremo del fusible haciendo palanca desde la cavidad de sostén. Tenga cuidado de no romper la ventana de vidrio - **Imagen C**.
4. Reemplace el fusible. **ADVERTENCIA:** riesgo de incendio. Reemplace el fusible únicamente con un fusible idéntico de 2,5 o 5,0 amperios y 125 vatios (3,6 mm x 10 mm). Asegúrese de que el fusible se encuentre debidamente ubicado en su cavidad.
5. Cierre la cubierta del fusible deslizándola a su posición de cierre original.



Imagen A



Tapa deslizando para abrir


Imagen B



Imagen C

LAS PARTES


1. Cubierta Transparente
2. Pulsador
3. Control Remoto
4. Cubierta Superior
5. Funda Trasera
6. Estuche Frontal
7. Cable De Alimentación
8. Base
9. Almohadillas Para Los Pies

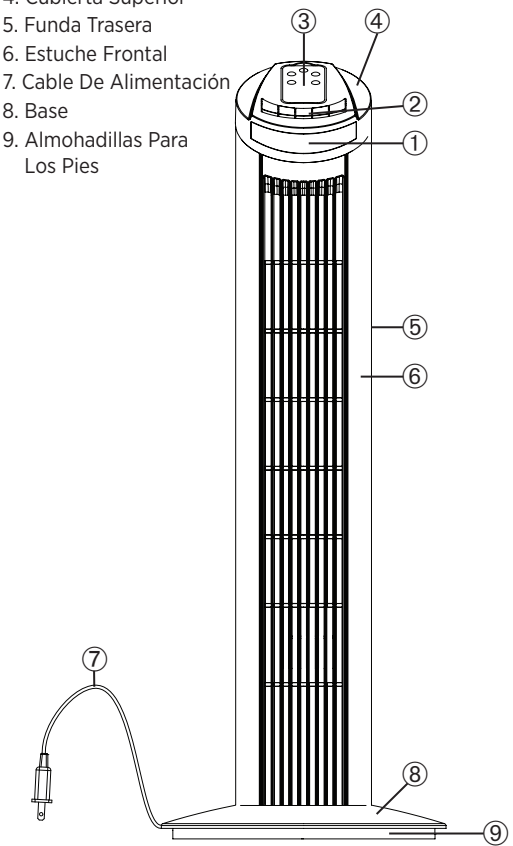

Especificaciones y parámetros del producto

- Voltaje clasificado: 120V - 60Hz
- Potencia nominal: 40W
- Peso neto: aprox. 2,7 kg
- Tamaño del producto: 270mm x 270mm x 750mm


ENSAMBLADO DEL ABANICO:

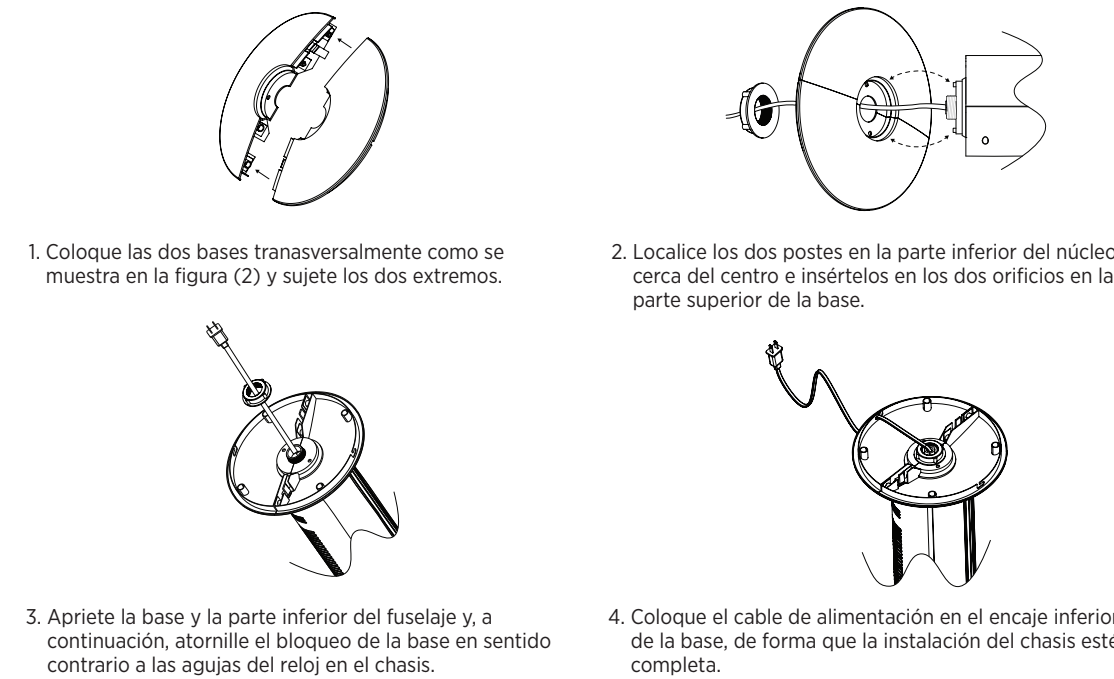

Reemplazo de La Batería Del Control Remoto.

Presione la pestaña de bloqueo A con el pulgar, luego elija el extremo del soporte de la batería con el dedo índice y tire del soporte hacia la flecha B para extraer la batería. Al instalar la batería, asegúrese de prestar atención a la dirección de los polos "+" y "-" de la batería (como se muestra arriba), no instale la batería al revés.

Nota: El tipo de batería es: batería de litio CR2025 3V, no instale un tipo de batería de especificación diferente.

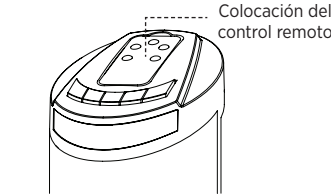

Almacenamiento Por Control Remoto

Devuelva el control remoto al compartimento de almacenamiento del control remoto de la cubierta superior cuando termine de usarlo.