

WORKS WITH ALL VR APPS

1. Download VR App. 2. Follow instructions for VR App.
3. Insert phone into VR headset, making sure phone is lined up properly according to center line between split screen images.
4. Put on your VR headset, adjusting headstraps to secure in place and wear comfortably.



YouTube VR Videos & all VR apps

Google™ Cardboard




1

BUILT-IN CONTROLS

Use on-board controls to interact with compatible apps.

PLEASE NOTE: Function of built-in controls varies across VR Apps and operating system. Not all apps will work with built-in controls.

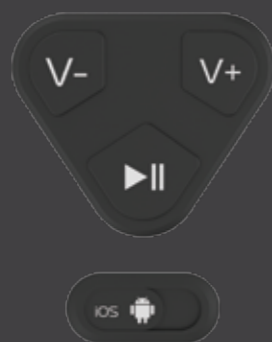

V+ Raise Volume

Press and Hold to Go Forward (Android only)

V- Lower Volume

Press and Hold to Go Back (Android only)

Start & Stop

Press 1x to start / answer phone call
Press 1x again to pause / end phone call
Press and hold to reject phone call
Press 2x to go Next
Press 3x to go Back

System Switch On

iOS and Android Compatible

2

2

CONTROLS FOR IMAGE CLARITY



OBJECT DISTANCE
Move FORWARD / BACK

3

FOCAL DISTANCE
Slide LEFT / RIGHT

3

EASY PHONE PLACEMENT

Follow light center line to center phone inside

* Phone cannot be in a case (fits up to 6" without a case)



4

4

tzumi

PRO
VIRTUAL REALITY

USER MANUAL

DREAM VISION

5



Adjustable
Head Straps



Retractable Earbuds
Pull gently. Do not overextend earbuds.

** Auxiliary cable must be connected to phone before using earbuds.

5

PRECAUTIONS

- Do not drop VR unit as it may damage the device.
- Avoid any strong impact to VR unit as this may damage the device.
- Do not pull apart or dismantle the VR unit in any way.

6

FAQs

Q: VR image is blurry

A: Check the smart phone screen line is lined up to the center. If phone screen is properly centered, adjust focal distance and object distance until images become clear.

Q: VR Magnetic control switch does not work

A: Make sure the direction on the magnetic control switch and the direction on your phone are positioned on the same horizontal line. Check that the app used to support the magnetic control function is activated.

6

TECHNICAL SPECIFICATIONS

Product Name: 3-D VIRTUAL GLASSES

Model: V5-2

Material: ABS + PC Eco-friendly material

Resolution: Based on the video source

Color Bit: Based on the video source

HD Lens: 42mm diameter

Zoom-in: 1.5-2x

Viewing Angle: 70°-90°degrees

Fits Phone Screen Size: 3.5-6 inches

Compatibility: Supports Android and iOS smart phones

Virtual Viewing: Simulates 1000 inch screen display

Focal Distance: Adjustable

Object Distance: Adjustable

Dimension: 7.48" x 5.24" x 4.33" inches

Frequency Response: 20Hz - 20KHz

Resistance: 32Ω ±15% Sensitivity: -58 ±3dB

Frequency Range: 30-15000 Hz

Earbuds: Fits in ear canal with MIC

Input interface: 3.5mm

Retractable Earbuds Pull-out

Cable Length: 7.5 inches

Cushioning materials: Foam + Vinyl

tzumi® Dream Vision™ distributed by tzumi® INC. NY, NY 10016
©Copyright 2016 tzumi®. All Rights Reserved. Made In China.

7

7